

Spares List
(F40-1000E)

Ref.	Part Number	Description	Material	Qty.
1	F40H-05-01	Sealing Plate	ABS	2
2	F40H-58-01/90*5.3	O-Ring	EPDM	2
3	F40H-60-01/25.8*3.55	O-Ring	EPDM	2
4	F40H-95-01	Locking Kit Segment	316SST	2
5	F40H-06-01	Feed/Conc.Port	2507SST	2
6	F40H-07-01	Bearing Plate	Aluminum Alloy	2
7	F40H-03-01	Saddle	Rubber	2-3
8	F40H-97-01	Retaining Ring	304SST	2
9	F40H-101-01	Retaining Ring	304SST	2
10	F40H-10-01	Plug	ABS	1
11	F40H-84-01	Securing Screw	304SST	6
12	F40H-59-01	O-Ring	EPDM	2
13	F40H-11-01	Strap	304SST-Rubber	2-3
14	F40H-83-01	Strap Screw	304SST	4-6
15	F40H-101-01	Adapter	ABS	2
16	F40H-59-01/19*2.65	O-Ring	EPDM	4
17	F40H-85-01	Screw	304SST	2
18	F40H-61-01	O-Ring	EPDM	4
19	F40H-09-01	Permeale Port	ABS	2